







## SPECIFICATIONS

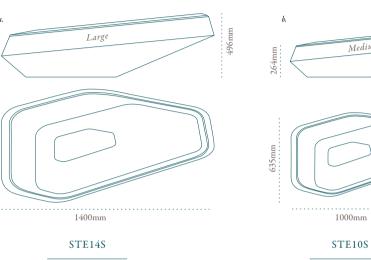



 


# STE10S

all stone weight: 38kg (83lb) inch: 39.3 x 25 x 14.1"

## STE06S


all stone weight: 13kg (28lb) inch: 24 x 15.4 x 8.7"


## LINERS

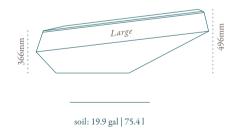

weight: 75kg (165lb)

  inch: 55.1 x 34.6 x 19.5"





soil: 6.7 gal | 25.3 l

soil: 1.3 gal | 4.8 l

## **CONTEXT**

ENQUIRIES info@contextgallery.com

Tel. 404. 477. 3301 Tel. 800. 886.0867

contextgallery.com

# Finish Options Liners











natural wood

oiled wood

## **CONTEXT**


ENQUIRIES info@contextgallery.com Tel. 404. 477. 3301 Tel. 800. 886.0867 contextgallery.com

### "Self-Watering" Liners

All Indigenus planters come with a liner for planting. The drawings show the sizes and capacities. These liners have been designed to house plants in proportion to the size of the planters. They contain a water reservoir at the base into which the roots grow. Using the process of "capillary action" the water is pushed up into the soil.

Water levels in the reservoir can be measured using the cap gauge and the liner has a plug which must be removed if the planter is exposed rainfall.

The liners usually need 14 weeks to integrate with the root system during which watering should be done the normal way onto the soil. Thereafter in typical conditions the reservoir only needs filling once or twice a month

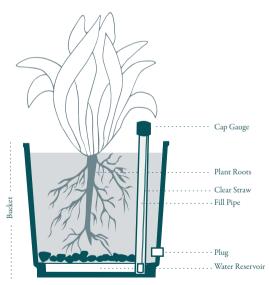

Always use the planter in conjunction with the liner and remove the plug at the base of the liner and the base of the planter if the planters are going to receive rainfall.